
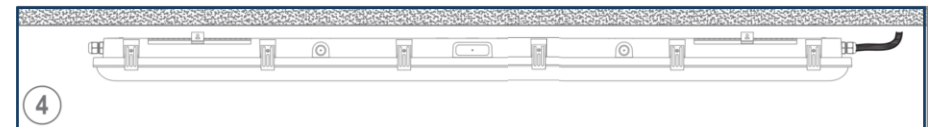
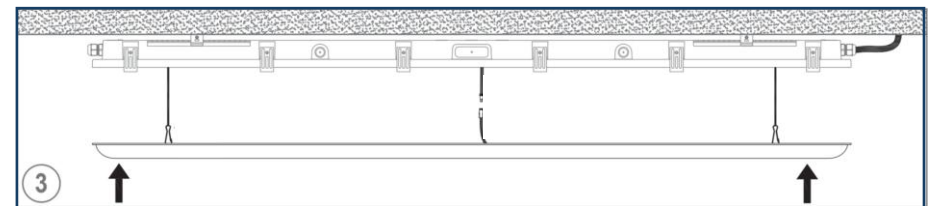
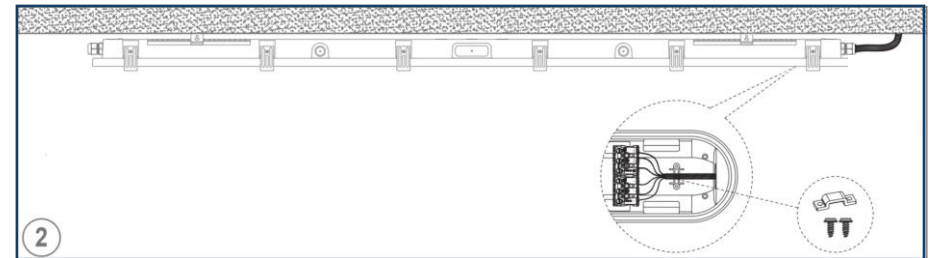


User Manual.

Liva.

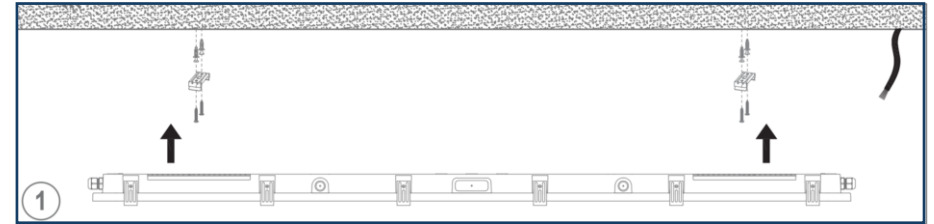

Einstellen der Leistung am Betriebsgerät

Power	Current	Dip Switch			
		1	2	3	4
25 W	225 mA	ON	ON	ON	--
27 W	250 mA	--	ON	ON	--
29 W	275 mA	ON	--	ON	--
32 W	300 mA	--	--	ON	--
35 W	325 mA	ON	ON	--	--
37 W	350 mA	--	ON	--	--
40 W	375 mA	ON	--	--	--
42 W	400 mA	--	--	--	--

Montage Sensor Node (optional)

